

# Using touch gestures

## Touch technology

When you use the SMART Board™ interactive flat panel or interactive whiteboard, you can perform touch and multitouch gestures on the interactive surface to control software applications.

### **SMART Board 8000 series interactive flat panel**

Two people can work together anywhere on the interactive surface.

### **SMART Board 800 series interactive whiteboard**

Two people can work together anywhere on the interactive surface.

## Using touch gestures


### **Click (in *Select* mode)**

Quickly tap your finger on the interactive surface.



### **Double click (in *Select* mode)**

Quickly tap the interactive surface twice in the same spot.

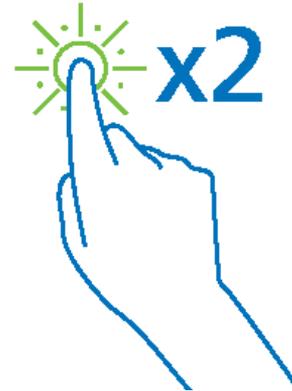

# Using touch gestures

## Right-click (in *Select* mode)

Press and hold your finger on the interactive surface for three seconds.



Press the **Right-Click** button on the SMART Pen Tray.

OR



## Erase (in any mode)

Use your flattened hand, palm or fist to press the interactive surface and move your hand across the area you want to erase.



Use the eraser tool in the SMART Pen Tray.

OR





# Using touch gestures

## Using multitouch gestures

### To enable gestures


1. Open the system's Control Panel and select SMART Board.
2. Press **SMART Hardware Settings**.
3. From the dropdown menu, select **Mouse and Gesture Settings** from the list.
4. Select **Enable Multi-Touch Gestures**.
5. If you haven't done so already, select **Multitouch Mode**.
6. Press **OK** to close the Control Panel.

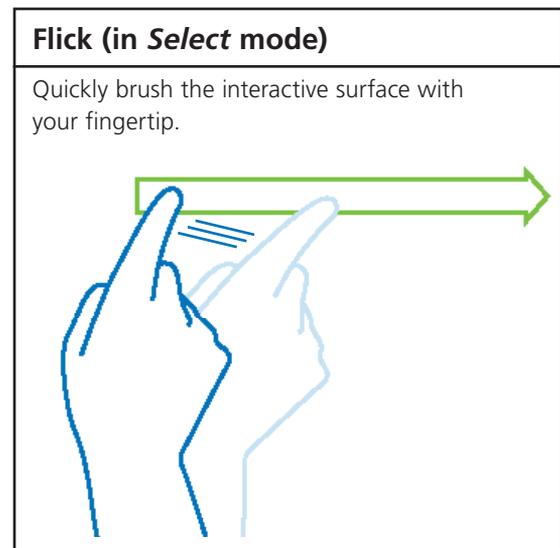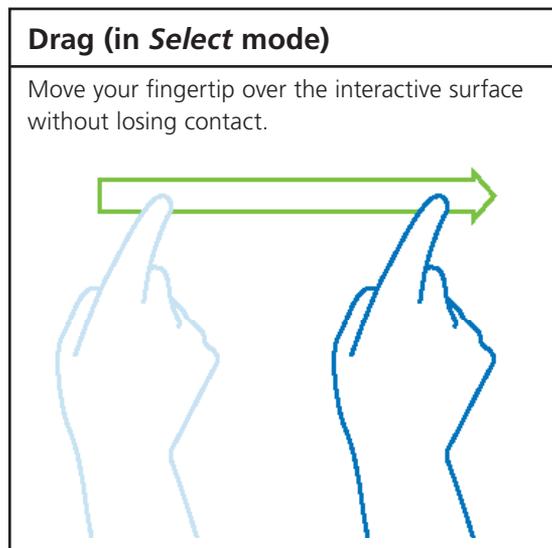

# Using touch gestures


## Zoom out (in *Pan* mode)

Touch the interactive surface with two fingers and bring them closer together.

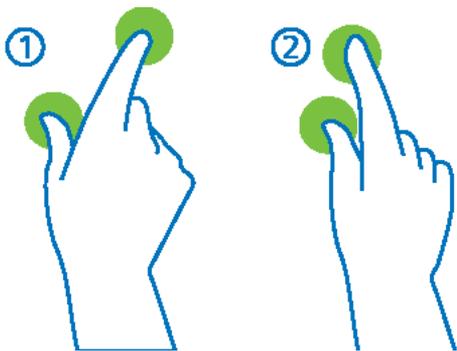

## Zoom in (in *Pan* mode)

Touch the interactive surface with two fingers and move them apart.

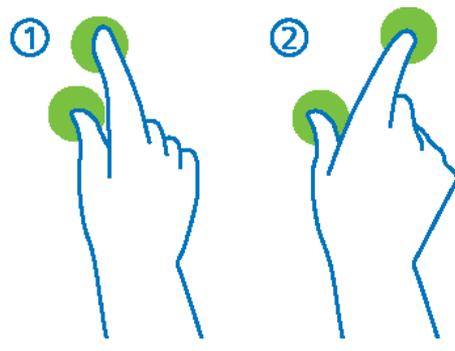

## Rotate (in *Select* mode)

Touch the interactive surface with two fingers and move them in a clockwise or counter-clockwise direction.

