



# SMART electric height-adjustable mobile stand

## User guide

FSE-410 (S410-1)



Was this document helpful?  
[smarttech.com/docfeedback/171625](https://smarttech.com/docfeedback/171625)

**SMART**<sup>®</sup>



## Learn more

This guide and other resources for your SMART electric height-adjustable mobile stand are available in the Support section of the SMART website ([smarttech.com/support](https://smarttech.com/support)). Scan this QR code to view these resources on your mobile device.

### **Trademark notice**

SMART Board, smarttech, the SMART logo and all SMART taglines are trademarks or registered trademarks of SMART Technologies ULC in the U.S. and/or other countries. All third-party product and company names may be trademarks of their respective owners.

### **Copyright notice**

© 2019–2024 SMART Technologies ULC. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language in any form by any means without the prior written consent of SMART Technologies ULC. Information in this manual is subject to change without notice and does not represent a commitment on the part of SMART.

This product and/or use thereof is covered by one or more of the following U.S. patents:

[www.smarttech.com/patents](https://www.smarttech.com/patents)

April 24, 2024

# Important information


## IMPORTANT SAFETY INSTRUCTIONS: SAVE THESE INSTRUCTIONS

### Note

Refer to the [illustrated installation instructions](#) for important information about installing and setting up the stand.

### Warning

- Read the following warnings carefully. Failure to read the warnings below or to follow the installation instructions included with the stand could result in personal injury or product damage.
- DANGER: to reduce the risk of shock, always unplug the stand from the electrical outlet before cleaning or servicing the stand.
- Closely supervise the operation of the stand when it's used near children under the age of 8 or people with cognitive disabilities.
- Use the stand only for its intended use as described in these instructions. Do not use attachments not recommended by SMART Technologies.
- Do not operate the stand if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the stand to a service center for examination and repair.
- Keep the power cord away from heated surfaces.
- Do not drop or insert any object into any opening.
- Do not use the stand outdoors.
- Connect the stand only to a properly grounded outlet.
- Only use the stand with a nominal 120-volt circuit that has a grounding plug that looks like the plug in the illustration below.

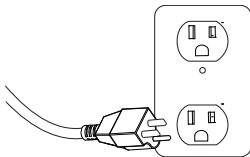

- Only connect the stand to an outlet that has the same configuration as the plug.

## Important information

- Do not defeat the safety purpose of the grounding-type plug. A grounding plug has two blades or pins and a third grounding prong. The third prong is provided for your safety. If the provided plug does not fit into the outlet, consult an electrician for replacement of the obsolete outlet.
- Do not alter or remove the grounding prong from the power cord.
- Improper use of the grounding plug can result in electric shock.
- Do not use a mains power adapter plug.
- The stand must be grounded to reduce the risk of electric shock in the event of an electrical short circuit.
- The assembly and installation of the stand is intended for a trained professional.
- The installer must follow the installation instructions. Not doing so can result in injury or damage to equipment.
- Use only SMART-supplied mounting hardware or hardware that is designed to properly support the weight of the mounted display and accessories.
- CAUTION—Use the FSE-410 stand only with displays that measure between 55" (139 cm) and 86" (219 cm) diagonally and that weigh between 77 lb. (35 kg) and 200 lb. (91 kg). Using the stand with other displays might be unstable and could result in injury.
- Use the stand only for lifting a display that meets the size and weight limitations indicated in the product specifications. Do not use the stand to lift people or objects.
- Do not overload the stand with too much weight, as this can cause injury or damage to the stand.
- Lock the casters before raising or lowering the stand.
- Operating the stand can create a hand-crushing or hand-pinching hazard. To prevent injury, keep hands and people away from crush and pinch locations on the stand.
- Allow adequate clearance above and below the stand to ensure safe raising and lowering.
- Do not operate the stand if it is damaged.
- Do not use the stand near water.
- Allow only adults who are trained and able to use the stand safely to operate it.
- Do not allow children or people who are not able to safely operate the stand to use it.
- Do not allow children to operate or play with the stand.
- Do not climb (or allow children to climb) on a wall- or stand-supported display. Climbing on the display could result in injury or product damage.

## Important information

- Do not stand (or allow children to stand) on a chair to touch the surface of the stand. Rather, mount the product at the appropriate height.
- Ensure that any cables extending across the floor to the stand are properly bundled and marked to avoid a trip hazard.
- Do not use the handles to lift the stand.
- Do not move the stand while external cables are connected or when the power is on.
- Move the display to its lowest position before you move the stand.
- Secure all cords and cabling before you move the stand.
- Two or more people are required to move the stand.
- Move a floor stand-mounted display with care. Quick stops, excessive force, and uneven surfaces may cause the stand to overturn.
- Unplug the power cord before cleaning the stand. Use only a dry or slightly dampened cloth to clean the stand.
- Do not allow children to clean or maintain the stand without supervision.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the power cord before connecting and disconnecting the control panel.
- Unplug the power cord if the stand malfunctions.
- To reduce the risk of fire or electric shock, do not expose the stand to rain or moisture.
- Do not use the stand if the power cord is damaged. Replace a damaged power cord only with a new cord and power bar provided by SMART Technologies or a qualified service technician.
- Do not modify or make changes to the control unit or hand switches.
- Do not open the control box. There is danger of electric shock.
- Allow only qualified service technicians to service the stand. Allowing anyone else to service the stand will void the warranty/guarantee.
- Refer all servicing to qualified service personnel. Servicing is required when the stand has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the stand, the stand has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only original accessories and replacement parts. Using other accessories or parts will void the warranty/guarantee.
- Make sure the stand's power cord is easily accessible at all times.

## Important information

### **Caution**

- Operate the stand only indoors.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the stand.
- Use only a power extension cord that is rated for the stand's electrical load.
- Do not exceed the duty cycle written on the product label.

### **Important**

- Keep these instructions.
- Make sure an electrical socket is near the stand and remains easily accessible during use.
- Plug the stand into its own electrical outlet for best operation.
- The stand is intended to be used by a trained operator in a commercial setting. It is not intended to be used in an area where children or people with disabilities are not supervised.
- When operating the stand, you must be familiar with the entrapment hazard of the stand, the mounted display, and of mounted accessories. In some cases, there can be less than 12" (30.5 cm) of clearance between the bottom of the display and the stand's base. This can cause a person to be pinned and injured. Installed accessories, such as the laptop shelf, can also cause people to be pinned between the stand and fixed objects or furniture. Those who operate the stand must ensure that they and others stay clear of entrapment locations when raising and lowering the stand.
- This product may contain substances that are candidate SVHCs under the EU REACH Regulation (EC) 1907/2006. Check <https://echa.europa.eu/scip-database> for the latest information.

# Contents

- Important information** ..... 3
- Chapter 1 About the stand** ..... 8
  - Features ..... 8
  - Components ..... 9
  - Accessories ..... 10
  - More information ..... 11
- Chapter 2 Assembling the stand** ..... 12
  - Environmental requirements ..... 12
  - Considerations when assembling the stand ..... 13
- Chapter 3 Using the stand** ..... 14
  - Moving the stand ..... 14
  - Raising, lowering, calibrating, and resetting the stand ..... 15
- Chapter 4 Troubleshooting the stand** ..... 20
  - Resolving general issues ..... 20
  - Using the status light ..... 21
- Product labels** ..... 22

# Chapter 1 About the stand

Features .....	8
Components .....	9
Control switch .....	9
Accessories .....	10
More information .....	11

---

## Features


The SMART electric height-adjustable mobile stand has the following features:

Feature	Description
Powered height adjustment	With its 26" (66 cm) of electric-powered height adjustment, you can easily adjust the height of a mounted display with the press of a button.
Automatic height-adjustment safety lock	The stand's height-adjustment mechanism locks automatically after 20 seconds of inactivity.
Height-adjustment safety limits	The stand features height-adjustment limits to prevent the stand from hitting objects within the height-adjustment path.
Locking casters	The stand's plate-mounted casters allow you to easily roll the stand across smooth surfaces and lock the casters to secure the stand.
Safety bounce-back mechanism	The stand features a safety mechanism to prevent injury and damage when raising and lowering a display. If an obstruction is encountered while the stand is being raised or lowered, the stand will stop and reverse direction briefly.
Power bar	The power bar, mounted inside the cabinet, has surge protection and can be used for connecting a display and accessories to power.
Sturdy steel frame	The sturdy steel frame and wide footprint allows the stand to support displays that range from 55" (139 cm) to 86" (219 cm) and that weigh between 77 lb. (35 kg) and 200 lb. (91 kg). It supports a maximum weight of 228 lb. (103 kg) with a display and accessories.
Locking cabinet	The locking cabinet securely stores a computer, accessories, and cables.
Americans with Disabilities Act (ADA) compliance	The stand's design meets Americans with Disabilities Act (ADA) accessibility standards.



# Components


The stand consists of the following components:

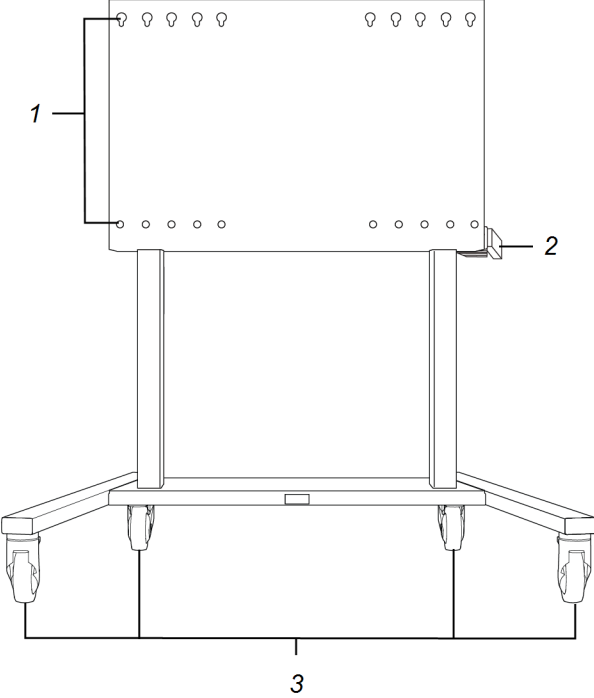




No.	Description
1	Mounting holes
2	Control switch
3	Locking casters
[Not shown]	Storage cabinet (rear surface)
[Not shown]	Surge-protected power bar (mounted inside the cabinet)

## Control switch

 


You can raise and lower the stand with the control switch located on the right side of the stand. The control switch has three buttons and an indicator light.



Button	Description
	Unlocks the height adjustment lock.
	Sets the upper and lower limits.
	Unlocks the height adjustment lock.

## Accessories

The following accessories are available for the mobile stand:

Accessory	Description
Laptop shelf	<p>The laptop shelf is a convenient place for a laptop or keyboard when you're using a stand-mounted display.</p> <p> <b>Caution</b> The maximum allowable load is 13 lb. 3 oz. (6 kg).</p>
Handles	<p>The handles are a sturdy place to push and pull when you're moving the stand.</p> <p> <b>Warning</b> Do not use the handles to lift the stand.</p>
Cable hook	The cable hook safely secures cables when you move the stand.
Power bar	<p>The power bar is a convenient place to connect the mounted display and accessories to power.</p> <p> <b>Caution</b> Use only the included six outlet power bar (model TPL615B) with the stand.</p>

## More information

See the following resources for more information:

- FSE-410 specifications: [smarttech.com/kb/171626](https://smarttech.com/kb/171626)
- FSE-410 illustrated installation instructions: [smarttech.com/kb/171620](https://smarttech.com/kb/171620)

These documents are available in the Support section of the SMART website: [smarttech.com/support](https://smarttech.com/support).

# Chapter 2 **Assembling the stand**

Environmental requirements .....	12
Considerations when assembling the stand .....	13

---

The stand requires assembly. Consult the *SMART electric height-adjustable mobile stand illustrated installation instructions* ([smarttech.com/kb/171620](http://smarttech.com/kb/171620)) included with the stand for assembly instructions.

## **Warning**

Failure to follow the installation instructions included with the stand could result in personal injury or product damage.

## **Caution**

Ensure any display you install on the stand weighs between 77 lb. (35 kg) and 200 lb. (91 kg).

## Environmental requirements

Before installing the stand, refer to the following environmental requirements.

## **Caution**

- Do not operate the stand immediately after moving it from a cold location to a warm location. Allow the stand to reach room temperature before operation to prevent possible product damage.
- Do not place the stand in hot locations, such as near heating equipment.

# Considerations when assembling the stand

## **Warning**

- Two people are required to safely assemble the stand and to mount or remove the display.
- Lock the casters before installing or working with the display on the stand or adjusting its height.

## **Notes**

- You require ample work space to assemble the stand.
- Do not set up or use the stand in an area with excessive levels of dust, dirt, humidity, or smoke.

The use of the included WM-SBID-200 wall mount is required for some models of display:

Model(s)	Recommendation
SMART Board GX Series SMART Board GX (V2) 65" models SMART Board GX (V2) 75" models SMART Board MX Series SMART Board MX (V4) 55" models SMART Board MX (V4) 65" models SMART Board QX Pro 65" models SMART Board 6000 Series SMART Board 7000 Series	The wall mount isn't required.
SMART Board 6000S Series SMART Board 7000R Series SMART Board GX (V2) 86" models SMART Board MX (V4) 75" models SMART Board MX (V4) 86" models SMART Board QX Pro 75" models SMART Board QX Pro 86" models	The wall mount is required.

# Chapter 3 Using the stand

Moving the stand .....	14
Raising, lowering, calibrating, and resetting the stand .....	15
Calibrating the stand .....	15
Unlocking the height-adjustment safety lock .....	16
Raising and lowering the stand .....	16
Setting height limits .....	17
Setting and using favorite positions .....	17
Resetting the stand .....	19

---

## Moving the stand

### **Warning**

- Do not use the handles to lift the stand.
- Do not move the stand while external cables are connected or when the power is on.
- Move the display to its lowest position before you move the stand.
- Secure all cords and cabling before you move the stand.
- Two or more people are required to move the stand.
- Move a floor stand-mounted display with care. Quick stops, excessive force, and uneven surfaces may cause the stand to overturn.

### **To move the stand**

1. Shut down the mounted display and accessories.
2. Press down and hold the control switch until the display reaches its lowest position.
3. Flick the power switch to the off position.
4. Remove all loose items from the stand and the storage cabinet.
5. Unplug the stand from the power outlet and secure all cables.
6. Flip the caster brakes up to unlock them.

7. Carefully push the center point of the legs to move the stand. Do not push on the upper part of the stand, as this might cause it to tip over.
8. After the stand is moved, flip the caster brakes down to lock them and secure the stand in place.
9. Connect the power cable to the outlet and secure any cables that run along the floor.

## Raising, lowering, calibrating, and resetting the stand

### **Warnings**

- Ensure the locking bolts are securely tightened before operating the stand.
- Do not allow children or people who are not able to safely operate the stand to use it.
- Lock the casters before raising or lowering the stand.
- Operating the stand can create a hand-crushing or hand-pinching hazard. To prevent injury, keep hands and people away from crush and pinch locations on the stand.
- Allow adequate clearance above and below the stand to ensure safe raising and lowering.
- Use the stand only on a flat surface.


 

### **Caution**

Do not raise and lower the stand for more than two minutes at a time.

## Calibrating the stand

After assembling the stand, you must calibrate it before you start to use it.

### **To calibrate the stand**

1. Connect the stand to a power outlet.
2. Press the , , and  buttons in sequence to unlock the stand.
3. Lower the stand to the lowest position, and then press down on the control switch for 5 seconds.

### **Tips**

- Don't allow more than one second between button presses.
- Calibrating the stand will cause it to move.

The stand moves down 1 cm and then back up.

## Unlocking the height-adjustment safety lock

The stand's height-adjustment mechanism locks automatically after 20 seconds of inactivity. Unlock the height-adjustment lock before you raise or lower the stand.

### To unlock the stand's height adjustment

Press the , , and  buttons in sequence.


#### Tip

Don't allow more than one second between button presses.

## Raising and lowering the stand

### To raise the stand

1. Lift up and hold the control switch.

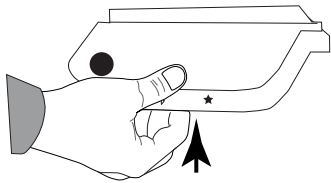


The stand rises.

2. Release the control switch to stop raising the stand.

### To lower the stand

1. Press down and hold the control switch.

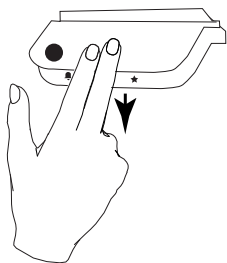

The stand lowers.



2. Release the control switch to stop lowering the stand.



## Setting height limits



You can set an upper and lower limit for the stand's height adjustment. If there's an object that's blocking the stand's adjustment path, the height limits prevent the stand from hitting the object.

### To set the upper height limit

1. Raise the stand to the height you want to use as the upper limit.
2. While pressing and holding the  button, lift the control switch up until the indicator light flashes.
3. Release the  button and the control switch.

The upper limit is set.

### To set the lower height limit


1. Lower the stand to the height you want to use as the lower limit.
2. While pressing and holding the  button, press the control switch down until the indicator light flashes.
3. Release the  button and the control switch.

The lower limit is set.

## Setting and using favorite positions

You can save up to two positions in the stand's memory. You can then raise or lower the stand to these favorite positions.


### To set a favorite position

1. Raise or lower the stand to the height you want to set as the favorite position.
2. Press the  button for two seconds.

The status light flashes white two times. After the stand saves the position, the status light appears solid white.


### To raise or lower the stand to a favorite position

1. Lift up and hold the control switch to raise the stand.

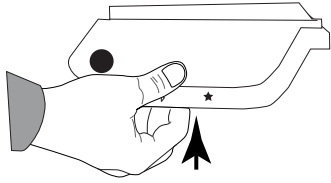

OR

Press down and hold the control switch to lower the stand.

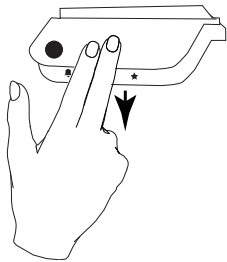


The stand rises or lowers until it reaches a favorite position.

2. Release the control switch within one second.

### To raise or lower the stand to a favorite position automatically

Double-tap the control switch from the bottom to raise the stand or from the top to lower it.

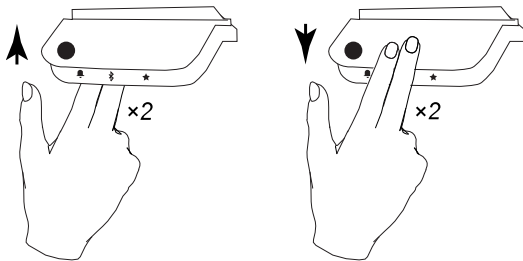

The stand rises or lowers until it reaches a favorite position.

#### Tip

To stop the stand from rising or lowering, tap the control switch once.

### To erase all favorite positions from the stand's memory



Press the ★ button for eight seconds.


The status light flashes red.

## Resetting the stand

If the stand lowers but does not move when you try raising it or if you replace the controller, perform a factory reset by following the steps below.

### To factory reset the stand

1. Connect the stand to a power outlet.
2. Press and hold the  and  for eight seconds.

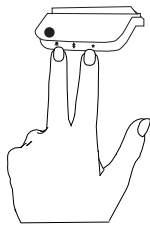

The indicator light flashes red three times when the factory reset is complete.

# Chapter 4 Troubleshooting the stand

Resolving general issues .....	20
Using the status light .....	21

---

This chapter describes how to troubleshoot the mobile stand.

## Resolving general issues

Issue	Possible solution
The stand does not raise or lower	<ul style="list-style-type: none"><li>• Ensure the power cable is connected to the stand.</li><li>• Check all cables and ensure that they are not damaged.</li><li>• Ensure the switch on the power bar is turned on.</li><li>• Ensure the actuators and the control panel are connected to the control box.</li><li>• Unplug the power cable for the stand. Wait 15 minutes and then reset the stand.</li></ul>
The display doesn't fit on the stand.	<ul style="list-style-type: none"><li>• Ensure you're using the mounting plate supplied with the SMART display.</li><li>• If you're using the stand with a third-party display, ensure the stand supports the display's dimensions and mounting patterns see (see <a href="http://smarttech.com/kb/171626">smarttech.com/kb/171626</a>).</li></ul> <p><b>Tip</b></p> <p>If the display is outside of the stand's supported dimensions, use a SMART wall mount (see <a href="http://smarttech.com/kb/171405">smarttech.com/kb/171405</a>).</p>

## Using the status light

The status light indicates the stand's current status:

Status	Status light	Notes
The stand is locked.	Not lit	The stand is locked after you first turn it on.
You attempt to use the stand while it's locked.	Momentarily flashes red	The status light momentarily flashes red to indicate that the stand is locked.
The stand is unlocked.	Not lit	The stand locks after 20 seconds of non-use.
The stand is in the process of locking.	Momentarily flashes red	The status light momentarily flashes red to indicate that the stand is locked.
You turn on the stand.	Momentarily flashes red	The stand is locked after you first turn it on.
There is a problem.	Green	Contact SMART Support ( <a href="https://smarttech.com/contactsupport">smarttech.com/contactsupport</a> ).

# Product labels

**FSE-410** **SMART**

**SMART Floor Stand Electric**

Part Number: 1034165 

Revision: XX Date of Manufacture: YYYYWW

Serial Number: VVVQYDDDPxxxx 

120V, 60Hz, 450W  
 Operation of Lift: 2 minutes on / 18 minutes off  
 Fonctionnement de l'ascenseur: 2 minutes marche / 18 minutes arrêt

CAN ICES-3 (A) / NMB-3 (A)  
 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
 (1) This device may not cause harmful interference.  
 (2) This device must accept any interference received, including interference that may cause undesired operation.

Assembly instructions can be viewed, downloaded, and printed at  
 Les instructions de montage peuvent être consultées, téléchargées et imprimées sur [www.smarttech.com/kb/171620](http://www.smarttech.com/kb/171620)

User guide can be viewed, downloaded, and printed at  
 Le guide de l'utilisateur peut être consulté, téléchargé et imprimé sur [www.smarttech.com/kb/171625](http://www.smarttech.com/kb/171625)

Commercial Product Usage AREA II 



SMART Technologies ULC • 3636 Research Road NW • Calgary, AB T2L 1Y1 Canada  
[smarttech.com/support](http://smarttech.com/support) • [smarttech.com/compliance](http://smarttech.com/compliance) • [smarttech.com/patents](http://smarttech.com/patents)  
 Made in Netherlands 1034228-01

**WARNING**

CAN TIP OVER RESULTING IN RISK OF INJURY. DO NOT ALLOW CHILDRENT UNDER 16 TO MOVE THE CART. MOVE THE CART SLOWLY.

		
ONLY ADULTS SHOULD MOVE THIS UNIT	APPLY MOVING FORCE ON NARROW DIMENSION	
		
ALWAYS PUSH NEAR MIDDLE PUSH, DON'T PULL	NEVER APPLY FORCE AT TOP	DON'T PULL


1034298-01

**WARNING - Risk of Tip Over**  
 For use with displays weighing 200 lb (91 kg) or less. Use with heavier displays may result in instability causing tip over resulting in death or serious injury.

**WARNING - Risk of Injury**  
 Not to be operated in locations where children or people with cognitive disabilities are anticipated to be present and not supervised. Maximum load 240 lb (109 kg). The use of accessories may reduce the max display weight (240 lb - accessories = Max display weight).

**WARNING - Risk of Electric Shock, Fire and/or Injury**  
 Review the assembly instructions to ensure that only the SMART supplied critical components are being installed in the assembly of this stand.



 


**IMPORTANT** - This stand has optional mounting accessories for laptops and speakers. See Specification Sheets for a list of qualified mounting accessories. Use of other mounting accessories may result in instability leading to possible injury. For commercial use only.



1034223-02

**AVERTISSEMENT**

PEUT RENVERSER ENTRAÎNANT UN RISQUE DE BLESSURE. NE PERMETTEZ PAS AUX ENFANTS DE MOINS DE 16 ANS DE DÉPLACER LE PANIER. DÉPLACER LE PANIER LENTEMENT.

		
SEULS LES ADULTES DEVRAIENT DÉPLACER CETTE UNITÉ	APPLIQUER UNE FORCE MOBILE SUR UNE DIMENSION ÉTROITE	
		
TOUJOURS POUSSER PRÈS DE MOYEN	NE JAMAIS APPLIQUER FORCE ST TOP	POUSSER NE PAS TIRER


1034298-01

**AVERTISSEMENT - Risque de basculement**  
 Pour une utilisation avec des écrans pesant 200 lb (91 kg) ou moins. Une utilisation avec des écrans plus lourds peut entraîner une instabilité pouvant causer un basculement qui peut entraîner la mort ou des blessures graves.

**AVERTISSEMENT - Risque de blessure**  
 Ne pas utiliser dans des endroits où des enfants ou des personnes ayant des déficiences cognitives devraient être présents et non surveillés. Charge maximale 240 lb (109 kg). L'utilisation d'accessoires peut réduire le poids maximum de l'écran (240 lb - accessoires = poids maximum du panneau).

**AVERTISSEMENT - Risque de choc électrique, d'incendie et / ou de blessure**  
 Consultez les instructions d'assemblage pour vous assurer que seuls les composants critiques fournis par SMART sont installés dans l'assemblage de ce support.

**IMPORTANT** - Ce support a des accessoires de montage en option pour les ordinateurs portables et les haut-parleurs. Voir les fiches techniques pour une liste des accessoires de montage qualifiés. L'utilisation d'autres accessoires de montage peut entraîner une instabilité pouvant entraîner des blessures. Pour usage commercial uniquement.



1034223-02

**WARNING**  
**RISK OF FIRE AND SHOCK**  
 Use only SJ or SJT or equivalent Type 18 AWG cord.

**AVERTISSEMENT - RISQUE D'INCENDIE ET D'ÉLECTROCUTION**  
 Utilisez uniquement un cordon SJ ou SJT ou équivalent de type 18 AWG.

1032759-02

**WARNING**  
 Risk of injury. Do not operate this equipment unless properly trained.

**AVERTISSEMENT**  
 Risque de blessure, ne pas utiliser à moins d'être correctement formé.


1034319-01

**Product labels**

**FSE-410 Subassemblies**

Laptop shelf – FSE-400-LS

**WARNING** - Risk of tip over  
Maximum load: 13.2 lbs (6 kg)



**AVERTISSEMENT**  
Risque de basculement.  
Charge maximale: 13,2 lbs (6 kg)

1032741-03

6 outlet power bar (Model TPL615B)

**CAUTION: TO REDUCE THE RISK OF THE ELECTRIC SHOCK USE ONLY IN DRY LOCATIONS INDOORS**  
**ATTENTION: POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE UTILISER UNIQUEMENT DANS DES ENDROITS SECS À L'INTÉRIEUR**

**CAUTION: DO NOT CONNECT TO ANOTHER RELOCABLE POWER TAP**  
**ATTENTION: NE PAS BRACHER DANS UNE AUTRE PRISE DE TENSION RELOCALISABLE**

Wall mount bracket – WM-SBID-200 (Model W200-1)


**WM-SBID-200 SMART Wall Mount**  
Model W200-1  
smarttech.com/support  
smarttech.us/compliance  
smarttech.us/compliance

SMART Technologies ULC  
3836 Research Road NW  
Calgary, AB T2L 1Y1 Canada  
1032987-01  
Made in China

**CAUTION:** This wall mount is intended for displays no larger or heavier than the limits indicated. Use with products beyond these limits may result in collapse of the mount leading to possible injury.

**ATTENTION:** Ce support mural est conçu pour des écrans pas plus grands ni plus lourds que les limites indiquées. L'utilisation avec des produits au-delà de ces limites peut entraîner l'effondrement du support et éventuellement provoquer des blessures.

 
**Date of Manufacture:** 201851




1032988-01

**UL** **US**  
**LISTED**  
AV Wall Mount  
E506955

**Display**  
86 inch (218 mm) maximum diagonal screen, weighing up to 220 lb. (100 kg)



 **Écran**  
Écran de diagonale maximale de 86 pouces (218 cm), pesant jusqu'à 220 lb (100 kg)



**SMART Technologies**

[smarttech.com/support](http://smarttech.com/support)

[smarttech.com/contactsupport](http://smarttech.com/contactsupport)

[docs.smarttech.com/kb/171625](http://docs.smarttech.com/kb/171625)