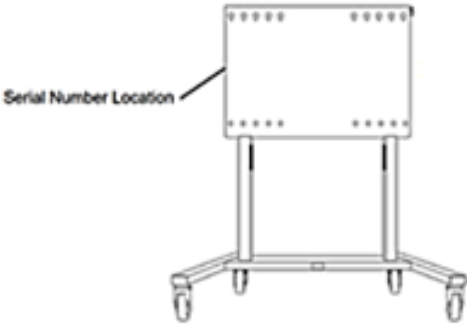
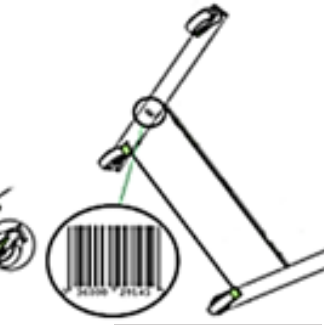


SMART electric height-adjustable mobile stand wheelbase replacement using Trestle Tool

FSE-410 and FSE-400

1. Lower the floor stand to its lowest position	2. Rotate the floor stand and lock the wheels
	
3. Position the trestle tool behind the floor stand	4. Raise floor the stand enough to slide in the trestle tool
	
5. Slide the trestle tool all the way in	6. Lower the floor until the bottom part of the cabinet reaches the top base of the trestle tool
	

SMART electric height-adjustable mobile stand wheelbase replacement using Trestle Tool
FSE-410 and FSE-400

7. Raise the floor stand until it reaches the bottom base of the trestle tool	8. Lock the wheelbase to the bottom base of trestle tool using the provided locking mechanism
	
9. Remove the wheelbase bolts using a 5mm hex tool	10. Slide the wheelbase off the floor stand
	
11. Record the Serial Numbers of the: floor stand, existing wheelbase, and replacement wheelbase in the provided data sheet (refer to end of this document)	
 Floor stand  Existing Wheelbase  Replacement Wheelbase	

SMART electric height-adjustable mobile stand wheelbase replacement using Trestle Tool

FSE-410 and FSE-400

12. Remove the casters from existing wheelbase using an 8mm hex tool



13. Attach removed casters to the replacement wheelbase



14. Position the wheelbase back onto the stand



15. Tighten the bolts using an 8mm hex tool to secure the wheelbase onto the stand



16. Remove the locking mechanism before lowering the stand

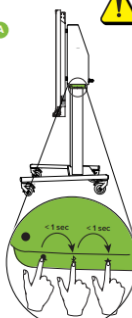
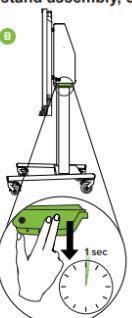
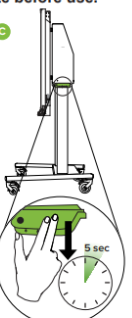
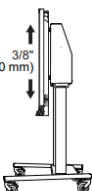


17. Lower the floor stand until the wheelbase reaches the floor



SMART electric height-adjustable mobile stand wheelbase replacement using Trestle Tool

FSE-410 and FSE-400

18. Raise the stand enough to remove the trestle tool out	19. Slide the trestle tool out clear of the floor stand
	
20. Perform final checks	21. The floor stand is now ready for use
A  Press the , , and  buttons in sequence B  Ensure the stand is at the lowest position. C  Press and hold the control switch for 5 seconds.  3/8" (10 mm) The stand moves up and down 3/8" (1 cm). The stand is ready for use or has been reset.	

[Click here to view the entire video.](#)

SMART electric height-adjustable mobile stand wheelbase replacement using
Trestle Tool
FSE-410 and FSE-400

FSE-410/400 Asset information registration form

Visit our website for a downloadable version of this form:

[Important information for FSE-400 and FSE-410 models - SMART electric height-adjustable mobile stand \(smarttech.com\)](https://www.smarttech.com)

No.	(1)FSE-410/400 SN	(2)Old wheel-base SN	(3)New wheel-base SN	Remarks
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				
26				
27				
28				
29				
30				
31				
32				